CRAFTMADE

ASSEMBLY & INSTALLATION INSTRUCTIONS FOR #46473-PLNWB

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

- 1. At the center of the BACK PLATE (2) there are eight perforated slots. Knock out the set matches your OUTLET BOX (1).
- Screw the #8-32 FIXTURE MOUNTING SCREWS (13) into the BACK PLATE (2) and thread the #8-32 HEX NUTS (14) onto the FIXTURE MOUNTING SCREWS (13) as shown. Secure the position of the FIXTURE MOUNTING SCREWS (13) by tightening the HEX NUTS (14) against the BACK PLATE (2).
- 3. Thread the FIXTURE LOOPS (18) onto the NIPPLE (19). (See Fig.)
- 4. Attach the CLOSABLE LINKS (16) to each end of the CHAINS (17), and then attach the CLOSABLE LINKS (16) onto the FIXTURE LOOPS (19) and the loops on bottom of COVER PLATE (12).
- 5. Unravel the fixture lead wires (7 and 9) and FIXTURE GROUND WIRE (4) and thread them through every other link of the CHAINS (17) starting with the chain link attached to the FIXTURE LOOP (18). Feed the fixture lead wires (7 and 9) and FIXTURE GROUND WIRE (4) through the loops on bottom of COVER PLATE (12). Pull the fixture lead wire (7 and 9) and the FIXTURE GROUND WIRE (4) upward to remove any excess slack. (See Fig.)
- 6. Attach the BLACK SUPPLY WIRE (8) to the SMOOTH (or BLACK) FIXTURE LEAD WIRE (9) by using the WIRE CONNECTOR (10). At the same manner, attach the WHITE SUPPLY WIRE (6) to the RIBBED (or WHITE) FIXTURE LEAD WIRE (7). Loop the FIXTURE GROUND WIRE (4) around the GROUND SCREW (11) of the BACK PLATE (2). (Note: Be sure to provide an extra 3" length of the FIXTURE GROUND WIRE (4) for connection to the SUPPLY GROUND WIRE (5).) Tighten the GROUND SCREW (11). Connect the remaining FIXTURE GROUND WIRE (4) to the SUPPLY GROUND WIRE (5) using a WIRE CONNECTOR (10). Place wiring and connections inside the OUTLET BOX (1).
- 7. Place the COVER PLATE (12) onto the FIXTURE MOUNTING SCREWS (13), and secure it into place using the BALL FINIALS (15) provided.
- 8. Slide the LARGE GLASS SHADES (22) and SMALL GLASS SHADES (23) over the SOCKETS (21), then secure with the SPACERS (24) and SOCKET RINGS (25). WRENCH (26) included.
- Screw light bulbs into the sockets and make sure they do not exceed the maximum wattage specified on the fixture's wattage rating label, **MAXIMUM 60W**.

INSTALLATION IS NOW COMPLETED

