


# Contemporary Lighting

PRODUCT NAME: Gyro II ITEM NUMBER: E24787-BKPC

Please consult your electrician for hanging fixture and wiring.

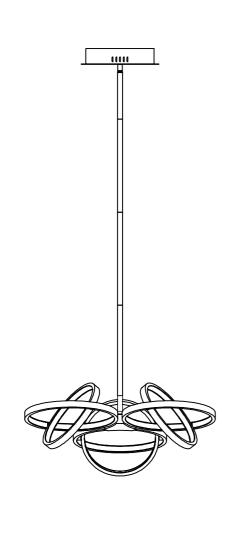

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:


Lutron MACL-153M Lutron DVL-153P Lutron SCL-153P Leviton IPL06-10Z Leviton 6674-POW

Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.


Warning! Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur.


Bulb (included): LED 73W

### IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

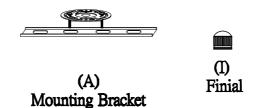


#### Locate all hardware & components before discarding packaging

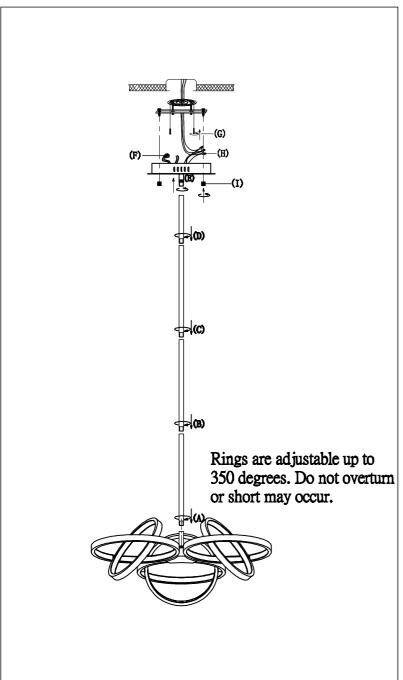


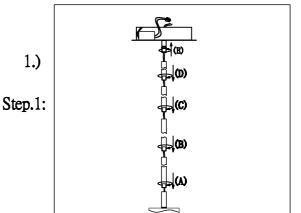

Run wire through stems and combine stem lengths to meet desired mounting height.

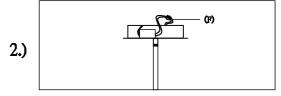

Step.2: Using wire terminal block in the canopy to wire the low voltage red/black wire to the driver.

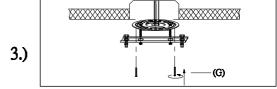


Step.3: Remove mounting bracket (G) from fixture and install to electrical box.


#### Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.

### IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

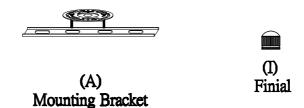


#### Locate all hardware & components before discarding packaging

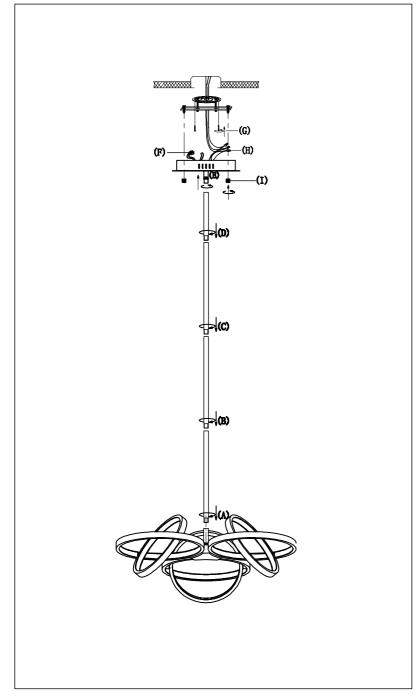



Step.4: Wire fixture to wires (H) in outlet box. Copper wire is for Ground.

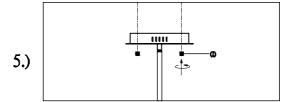

Step.5: Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install fixture to bracket and tighten screws (I) at the ends of the canopy to secure.

## Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.