harmonizedhome

EASY CONNECT TM INSTALLATION INSTRUCTIONS

IFM318A13BKW 12/23

NEED HELP? Call or Email us first

Our service team is ready to answer your questions... 1-800-265-1833 (English) / 1-800-567-2513 (French) IN CANADA - ressalescanada@canarmna.ca - IN USA - ressalesusa@canarmna.ca

Monday – Friday 8 AM - 5 PM E.S.T.



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS

READ ALL INSTRUCTIONS **IMPORTANT SAFETY**

INSTRUCTIONS SAVE THESE INSTRUCTIONS







SAFETY PRECAUTIONS:

- 1.TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE. DO NOT REMOVE INSULATION FROM FIXTURE.
- 2. WIRING SUPPLIES AS REQUIRED BY LOCAL ELECTRICAL CODE.
- 3. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- 4. CAUTION RISK OF FIRE. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- 5.TO CLEAN THE FIXTURE, TURN OFF THE POWER, WAIT FOR IT TO COOL, AND WIPE THE FIXTURE WITH A CLEAN, SOFT CLOTH.

NOTE: Product may not look exactly as shown in figures.

INSTALLATION:


Option 1

(


Green

(Ground)


Black (Live)

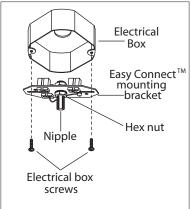

 $\mathbb{1}_{\circ}$ Attach nipple to mounting bracket. Adjust so it will clear hole in back of fixture and then lock nipple in place with hex nut. Attach mounting bracket to electrical box with electrical box screws (not included).

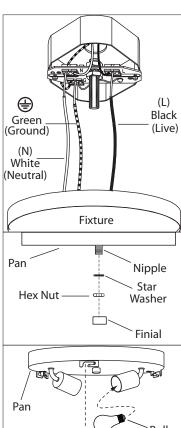


- 3ී Connect (push) electrical wires from fixture into correct inserts.
- 4。Once connections of wires are completed, carefully tuck wires and wire nuts into the electrical box making sure no bare wire (on the black and white) is visible at the wire nuts.
- 5. Secure the pan to the nipple tightening by star



- 6. Install proper bulb type and wattage (not included).
- \mathbb{Z}_{\circ} Align the arrow on the shade correspond to the slot on the pan then turn the shade clockwise.

Ensure the shade is safetly secured to the pan.

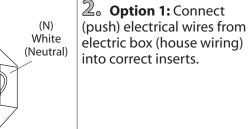

Option 2: For multiple green (ground), black (live) and white (neutral) wires joined in the electrical box (house wiring), attach a single "green", "black" and "white" jumper wire before connecting. Strip 7mm from a 6 in. jumper wires supplied. Then connect (push) wires into the

