


Contemporary Lighting


PRODUCT NAME: Rubic

ITEM NUMBER: E22914-BKPC


Please consult your electrician for hanging fixture and wiring.

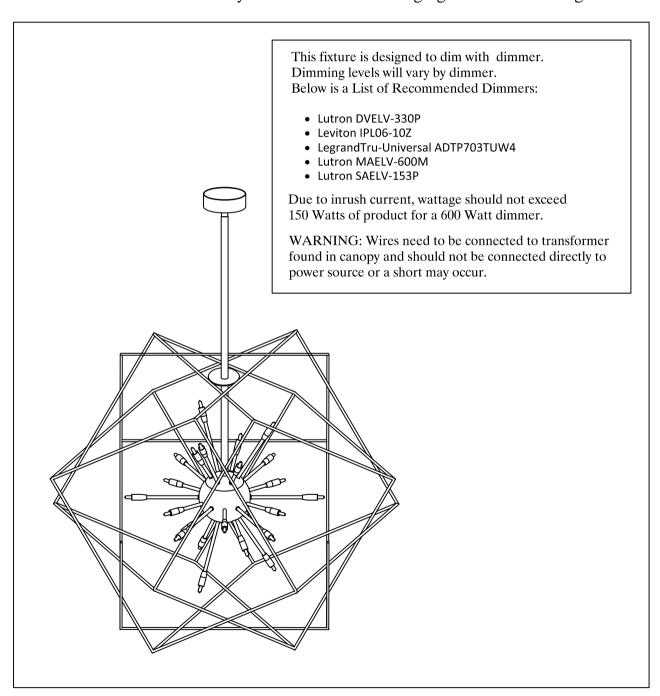

IMPORTANT: Turn OFF the power at the main fuse or circuit breaker box before starting installation

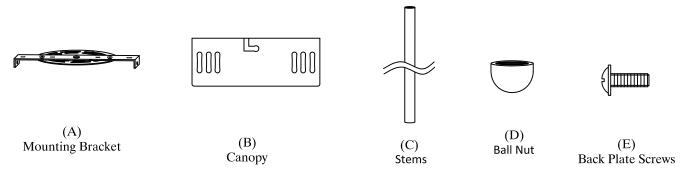


Locate all hardware & components before discarding packaging

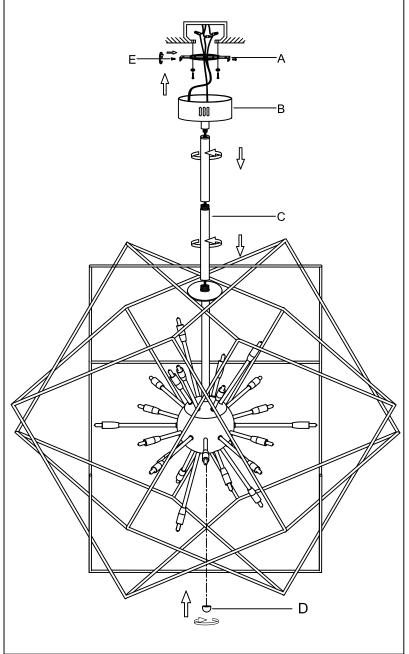


Cleaning & Care:


Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.



Step.1: Remove mounting bracket from canopy and install to electrical box.




Step.2: Run wire through stem (C) lengths and combine stem lengths to meet desired mounting height. Attach the stem (C) to the body of the fixture.

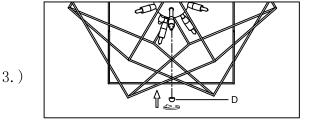

Step.3: Tighten the ball nut (D) on the bottom of the fixture.

4.)

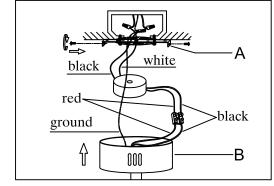

Step.4: Wire low voltage red/black wires to the terminal block, and wire high voltage black/white wire to the outlet box. Install the canopy (B) to the mounting bracket (A) using screws provided.