


**PRODUCT NAME: Kem 8-Lite Pendant**  
**ITEM NUMBER: E24308-18PC**


**Please consult your electrician for hanging fixture and wiring.**

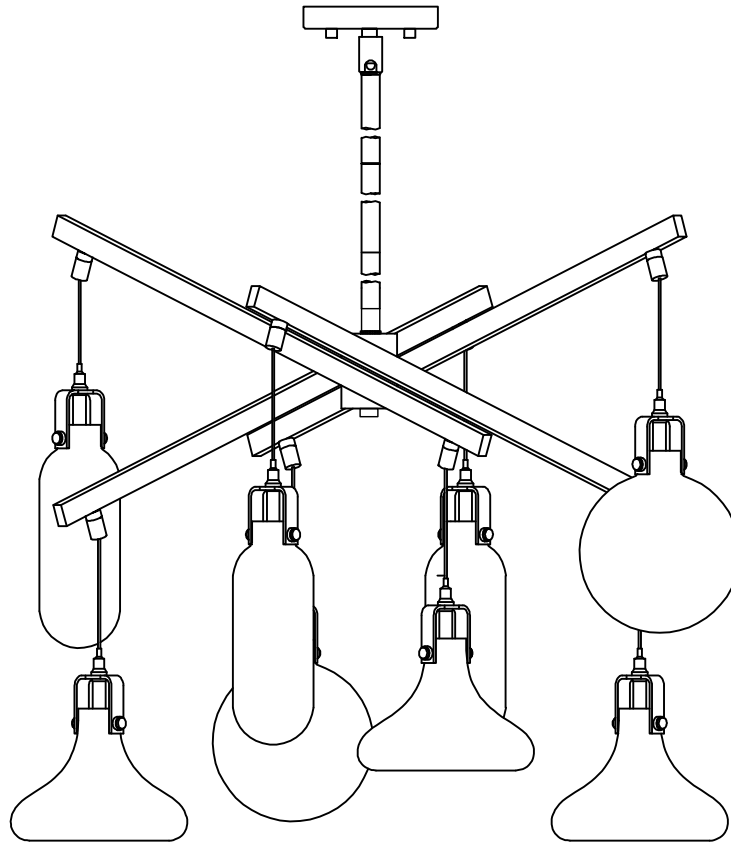



**Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.**

**Bulb( included): 8-40 Watt G9 bulbs**


**IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation**

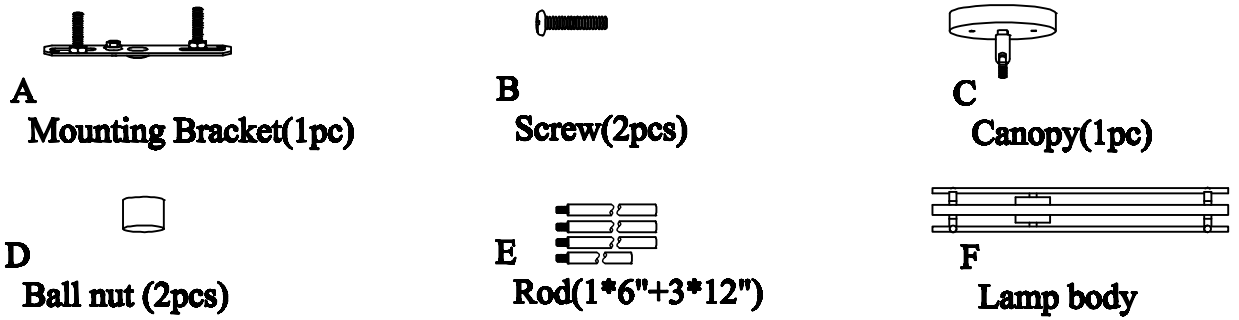

**Locate all hardware & components before discarding packaging**

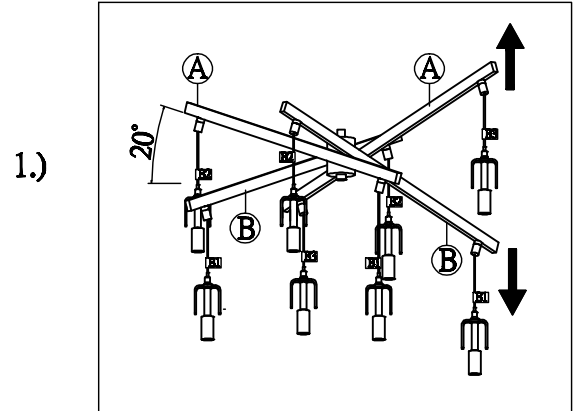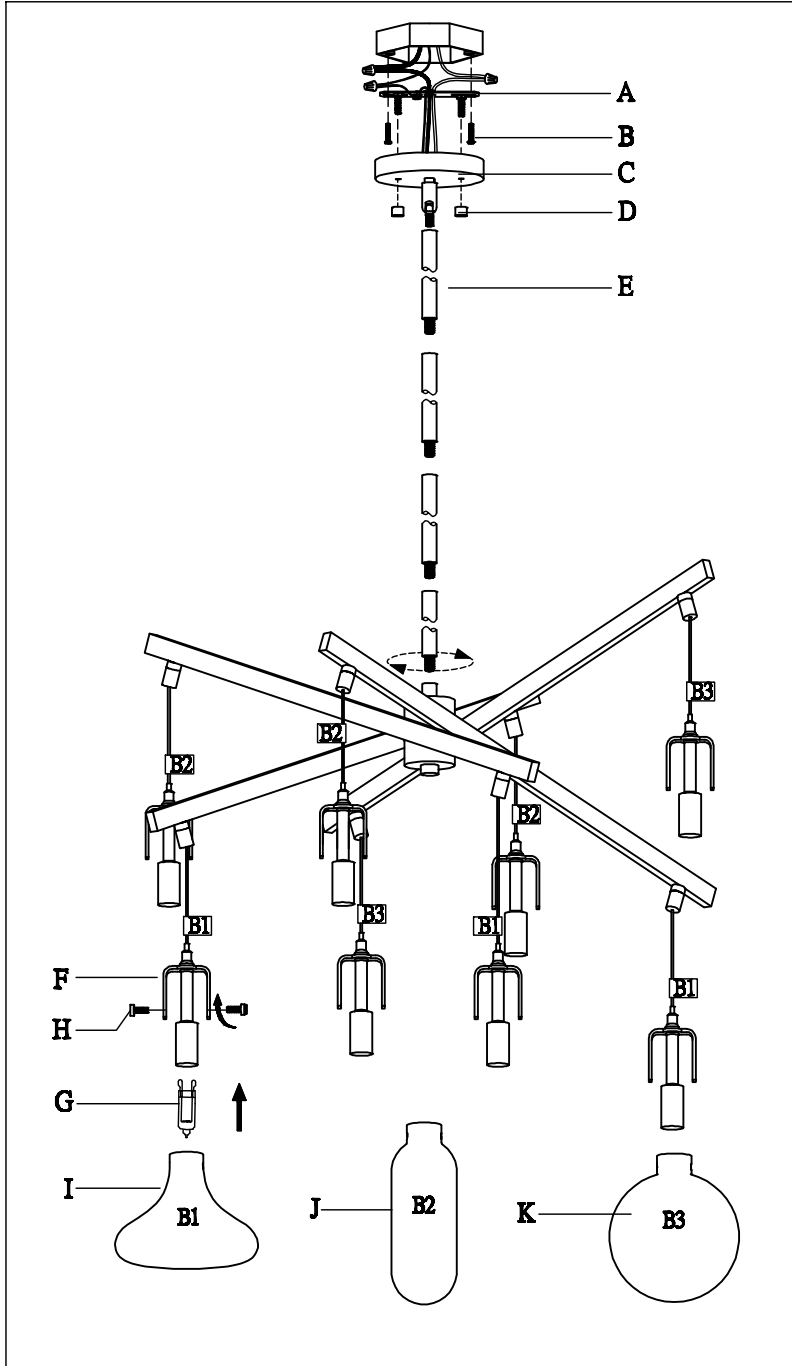

**Step.1: Adjust the lamp body(F), adjust the tube(A) to up 20 degree and adjust the tube(B) to down 20 degree after remove package**



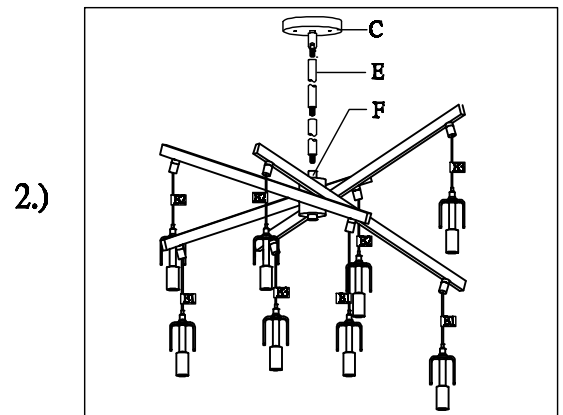


**Step.2: Carefully remove packaging from fixture. Run wire through stems (E) and combine stem lengths to meet desired mounting height. Then attach canopy (C) to fixture.**



**Cleaning & Care:**

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.


**IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation**

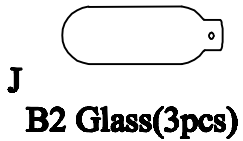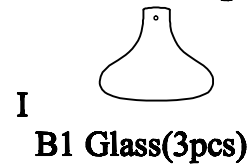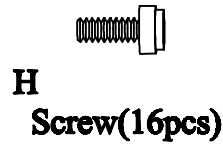

**Locate all hardware & components before discarding packaging**

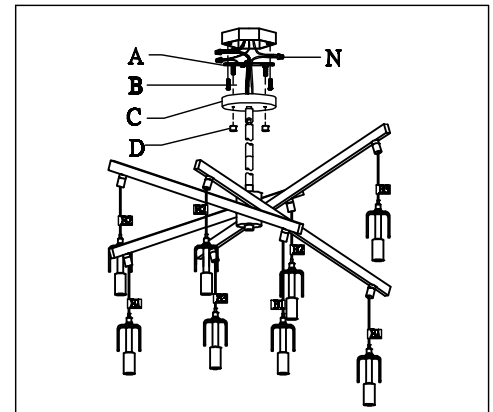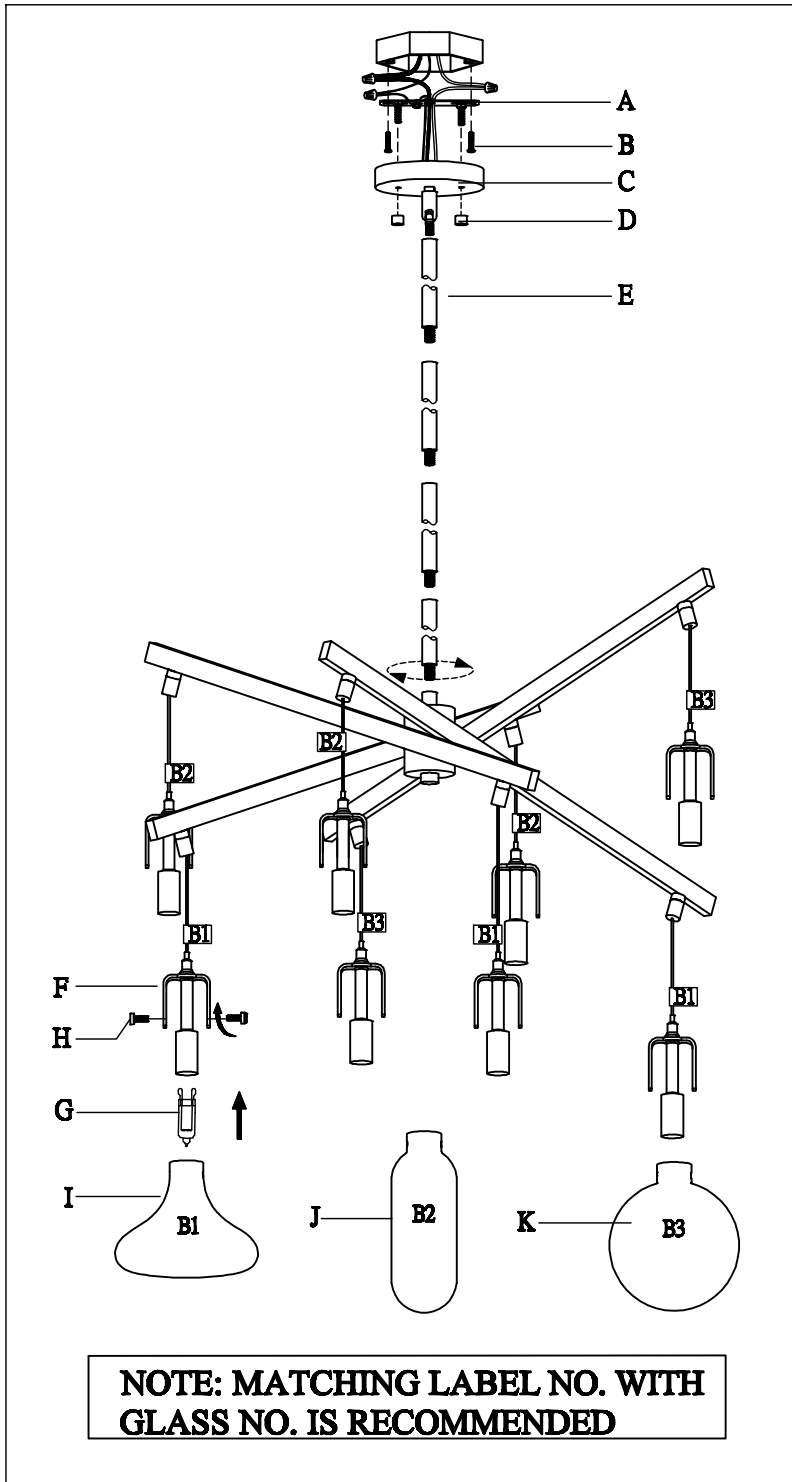

**Step.3: Wire fixture to wires in outlet box. Bare wire is for Ground. Install fixture to bracket and tighten ball nuts(D) on the canopy to secure.**

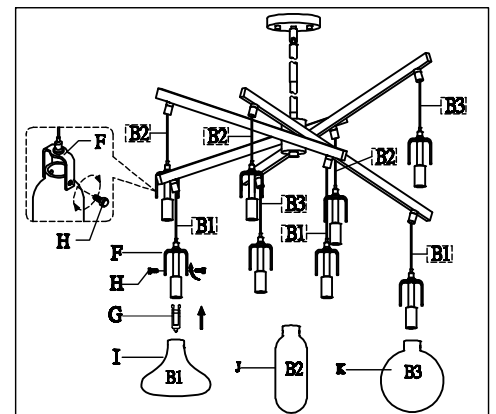

**Step.3: Insert the G9 bulbs one by one Attached the glass(B1, B2, B3) to yoke and secured with lock screw(H)**

**Cleaning & Care:**

**Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.**