




Contemporary  
Lighting™

PRODUCT NAME: Nova LED Pendant  
ITEM NUMBER: E24793-20PC

Please consult your electrician for hanging fixture and wiring.

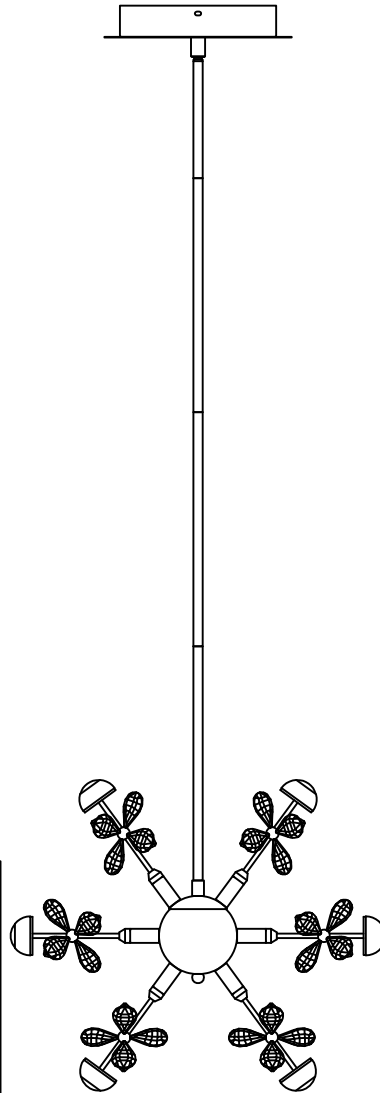

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:


Lutron MACL-153M  
Lutron DVCL-153P  
Lutron SCL-153P  
Leviton IPL06-10Z  
Leviton 6674-POW

Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.



Warning! Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur.

Bulb(integrated): LED 36W


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

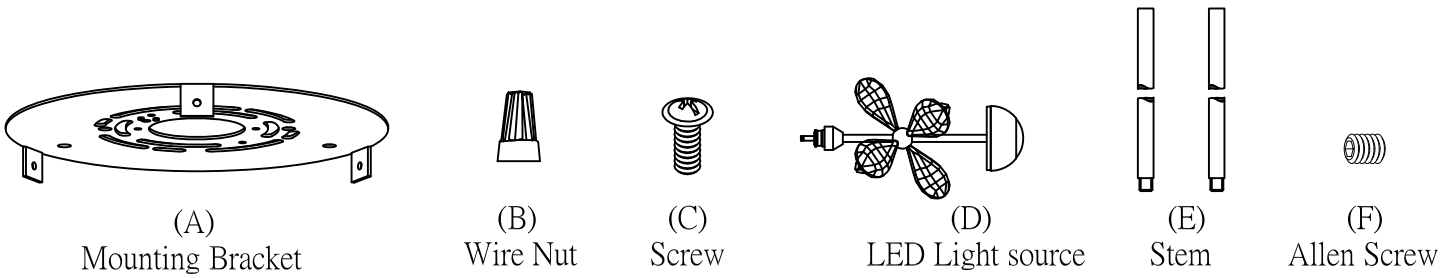


Locate all hardware & components before discarding packaging

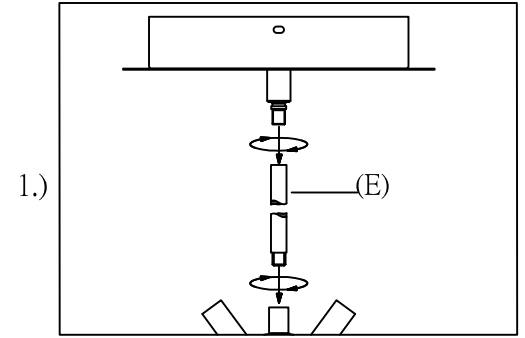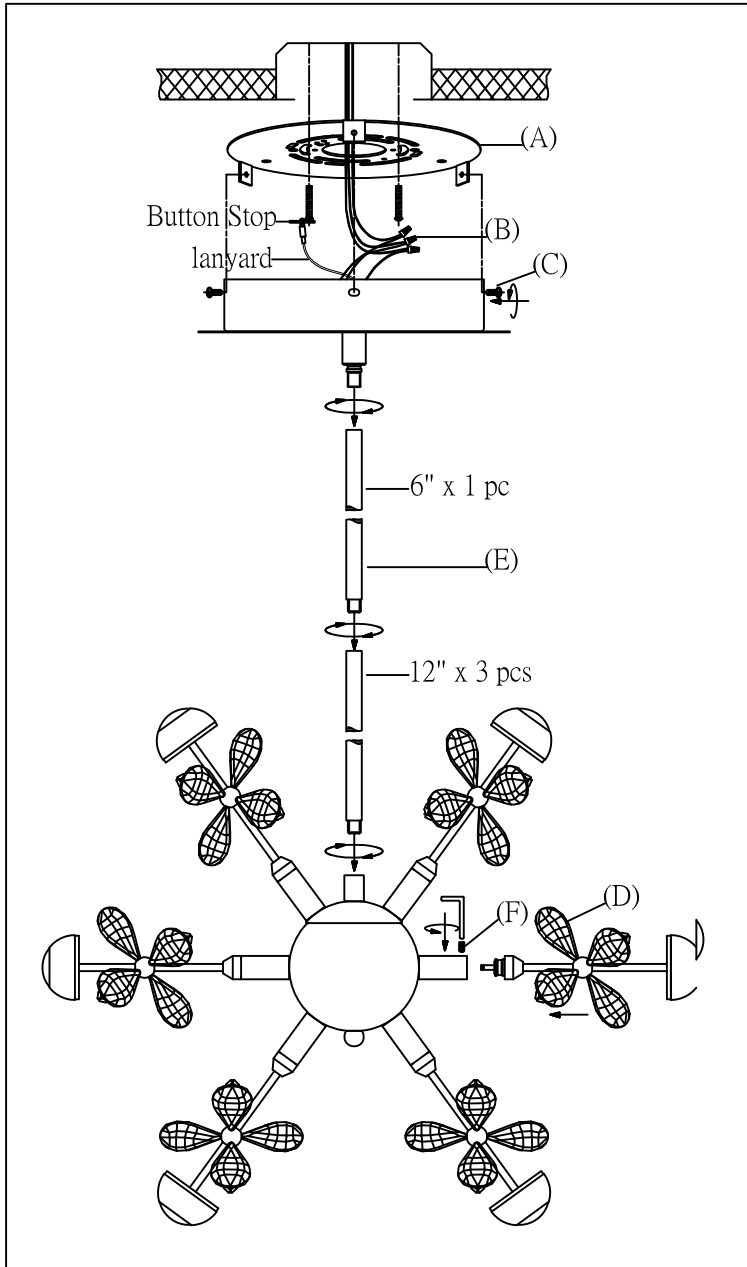

Step.1: Run wire through stems (E) and combine stem lengths to meet desired mounting height.

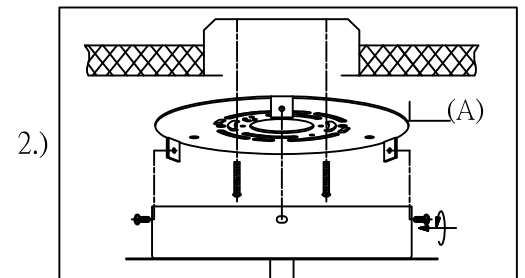


Step.2: Remove mounting bracket (A) from fixture and install to electrical box.




Step.3: The purpose of the lanyard is to provide a means to support the fixture hands free from the junction box while examining the electrical connection.

Wire fixture to wires (B) in outlet box. Copper wire is for Ground.

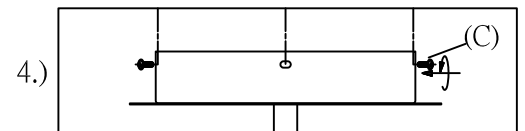

Step.4: Install lamp body to back plate using two screws (C) on side to secure.

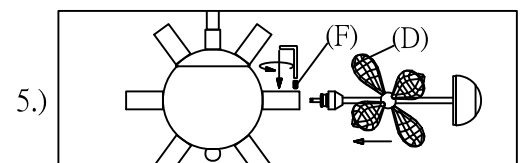

Step.5: Insert the LED light source (D) into the metal part and secure using Allen Screw (F)

### Cleaning & Care:

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.