




**PRODUCT NAME: Retro**  
**ITEM NUMBER: 25199CLPN**

**Please consult your electrician for hanging fixture and wiring**

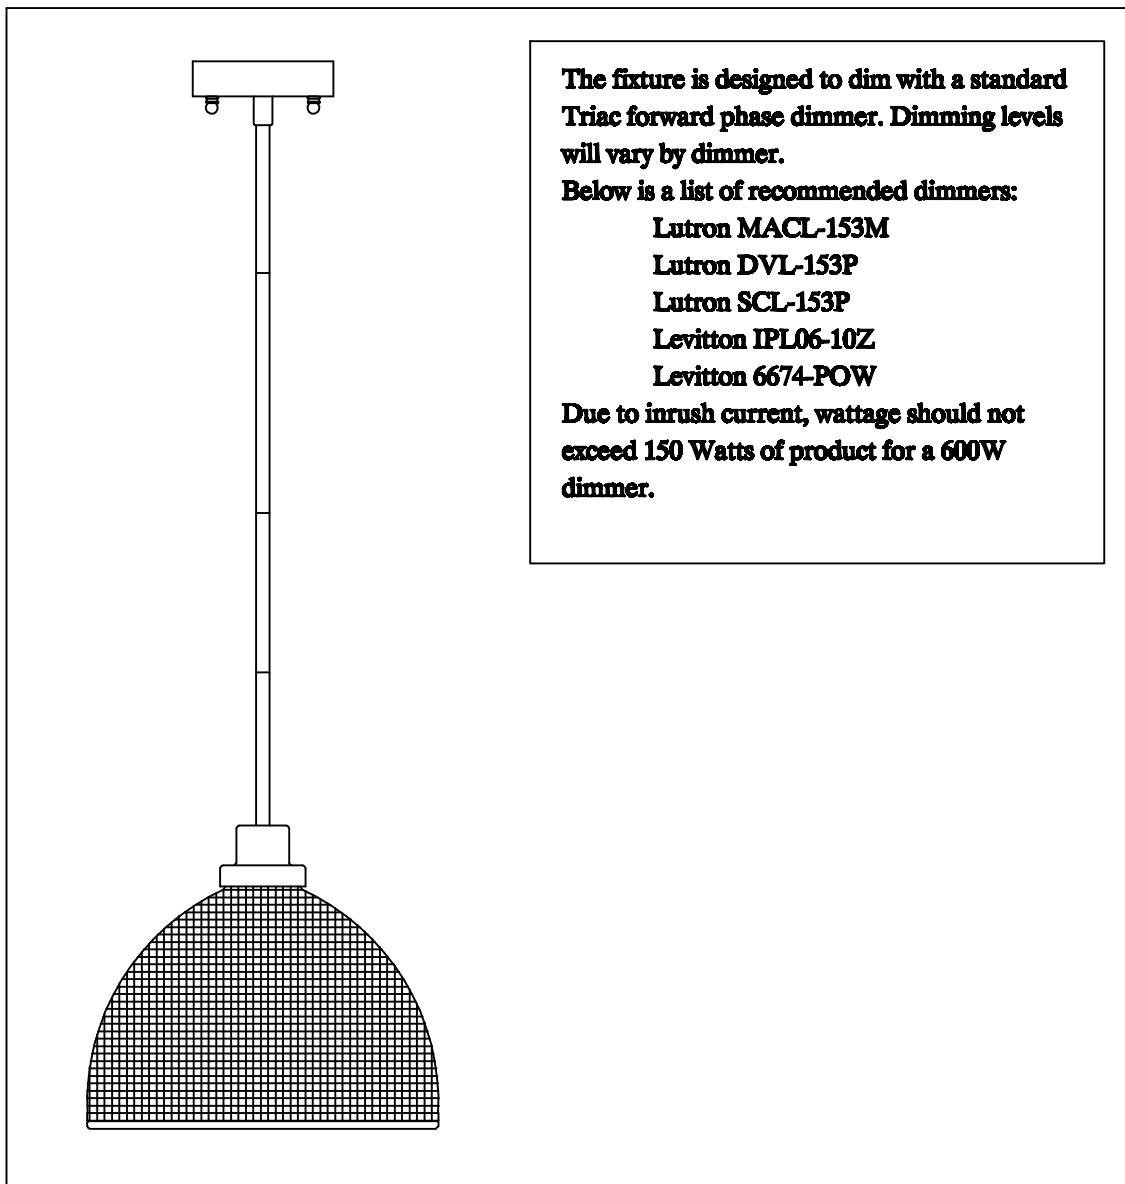

**The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.**

**Below is a list of recommended dimmers:**

**Lutron MACL-153M**

**Lutron DVL-153P**

**Lutron SCL-153P**

**Leviton IPL06-10Z**

**Leviton 6674-POW**

**Due to inrush current, wattage should not exceed 150 Watts of product for a 600W dimmer.**

**8W LED**

**PRODUCTS ARE NOT INENDED  
FOR COMMERCIAL USE**


**MADE IN CHINA**

**Page 1 of (2)**

**IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation**



**A**  
Mounting Bracket



**B**  
Canopy




**C**  
Finial



**D**  
Stems





**E**  
Cup

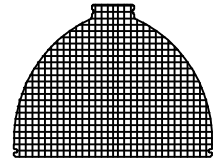


**F**  
Glass

**Locate all hardware & components before discarding packaging**

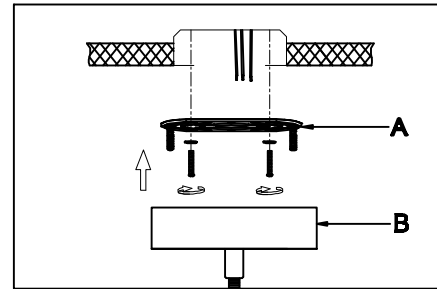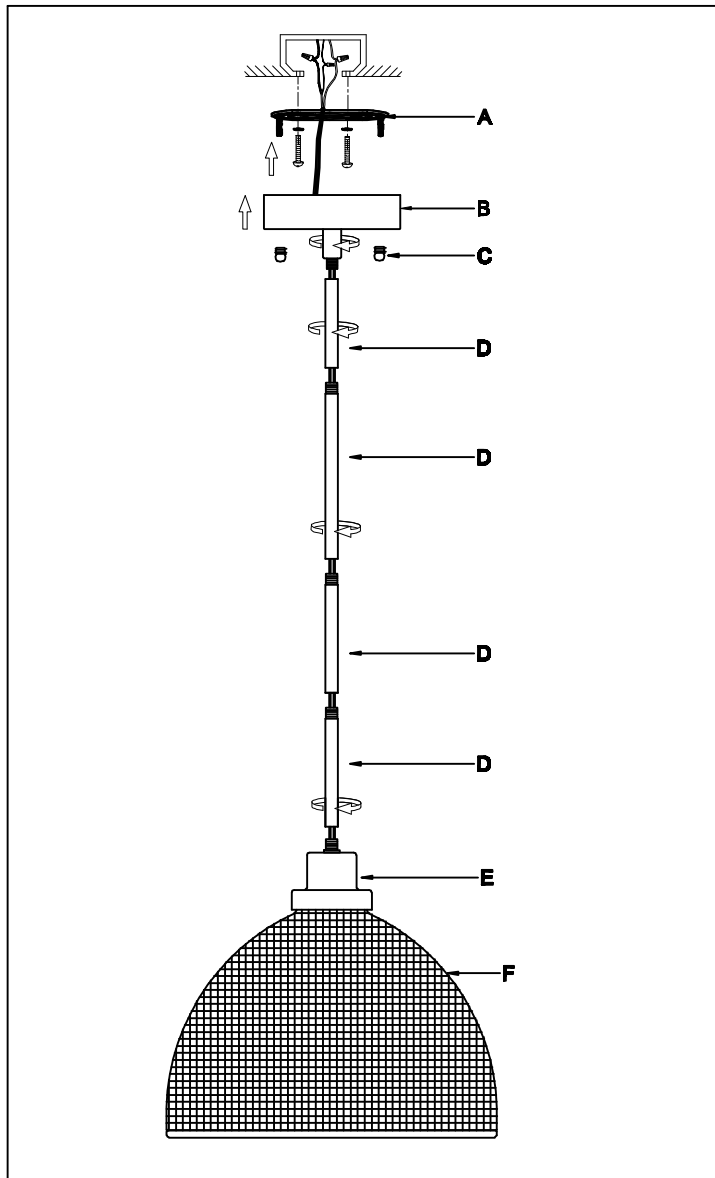


1.)

**Step 1: Remove mounting bracket (A) from canopy (B) and install to electrical box.**

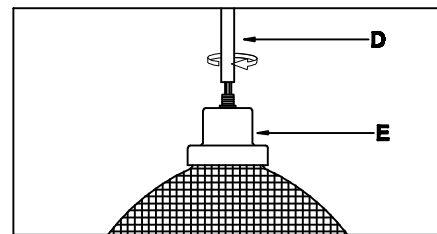


2.)

**Step 2: Run wire through stem (D) lengths and combine stem lengths to meet desired mounting height. Attach the stem (D) to the body of the fixture.**



3.)

**Step 3: Wire fixture to wires in outlet box. Copper wire is for Ground.**

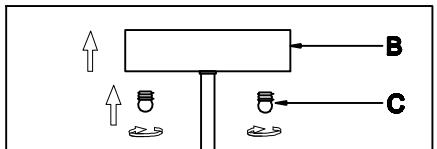

4.)

**Step 4: Install fixture to mounting bracket (A) using finials (C) to secure.**

**Cleaning & Care:**

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.