
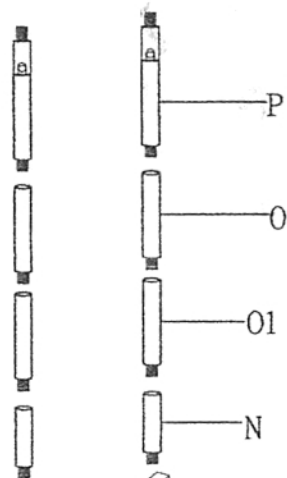


WARNING: WIRES NEED TO BE CONNECTED TO DRIVER FOUND IN CANOPY AND SHOULD NOT CONECT DIRECTLY TO POWER SOURCE OR A SHORT MIGHT OCCUR.

1. Screw tube (N) to the coupler (M);
tube (O1) to tube (N)
tube (O) to tube (O1)
tube (P) to tube (O)
 2. Put tube (P) through Stainless steel part (E),
ceiling pan (D)/ washer (B) and Ground wire (C).
Then, secure by hex nut (A) till tight
- remark:** *The above steps need to be done 2 times.*
3. Thread off Nipple (H), then put the glass frame (I)
to the flat metal (G), then secure by Finial(F) till tight

remark: *The above steps for each glass*

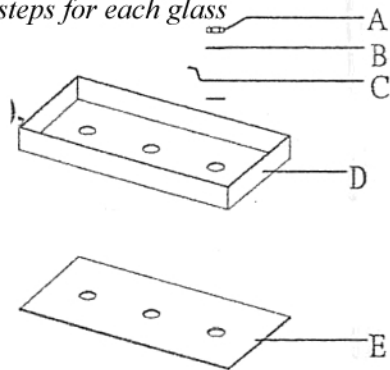

3. Identify the positive and negative clear wire from the lamp body: the Clear Smooth Wire with writing and labeled "P" is the positive electrode of the wire. The Clear Rigid Wire labeled "N" is the negative electrode wire.

5. Refer to the picture below for assembly of wire to drive instructions:

- a. In the canopy you will find the driver
- b. Take Clear Smooth Wire (P) from the lamp body and connect to the Red (+) wire
- c. Take the Ribbed Clear Wire (N) and connect to the Black (-) wire from the output side of the driver
- d. Take the White wire from input side and connect to neutral feed of electrical source
- e. Take Black Wire from Input side of driver and connect to live electrical source.

remark: *The driver is shown outside of the canopy for easy understanding of wire connection. In actuality, this driver is inside the canopy.*

