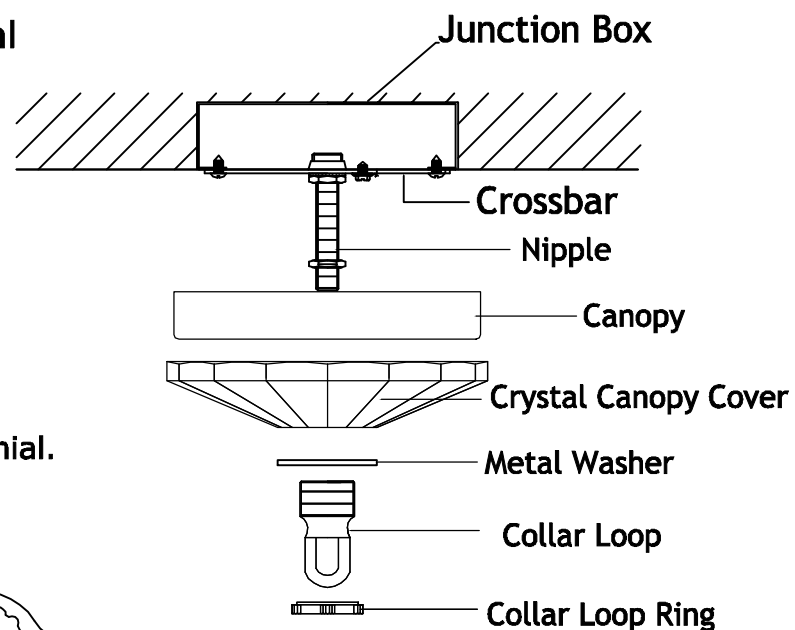
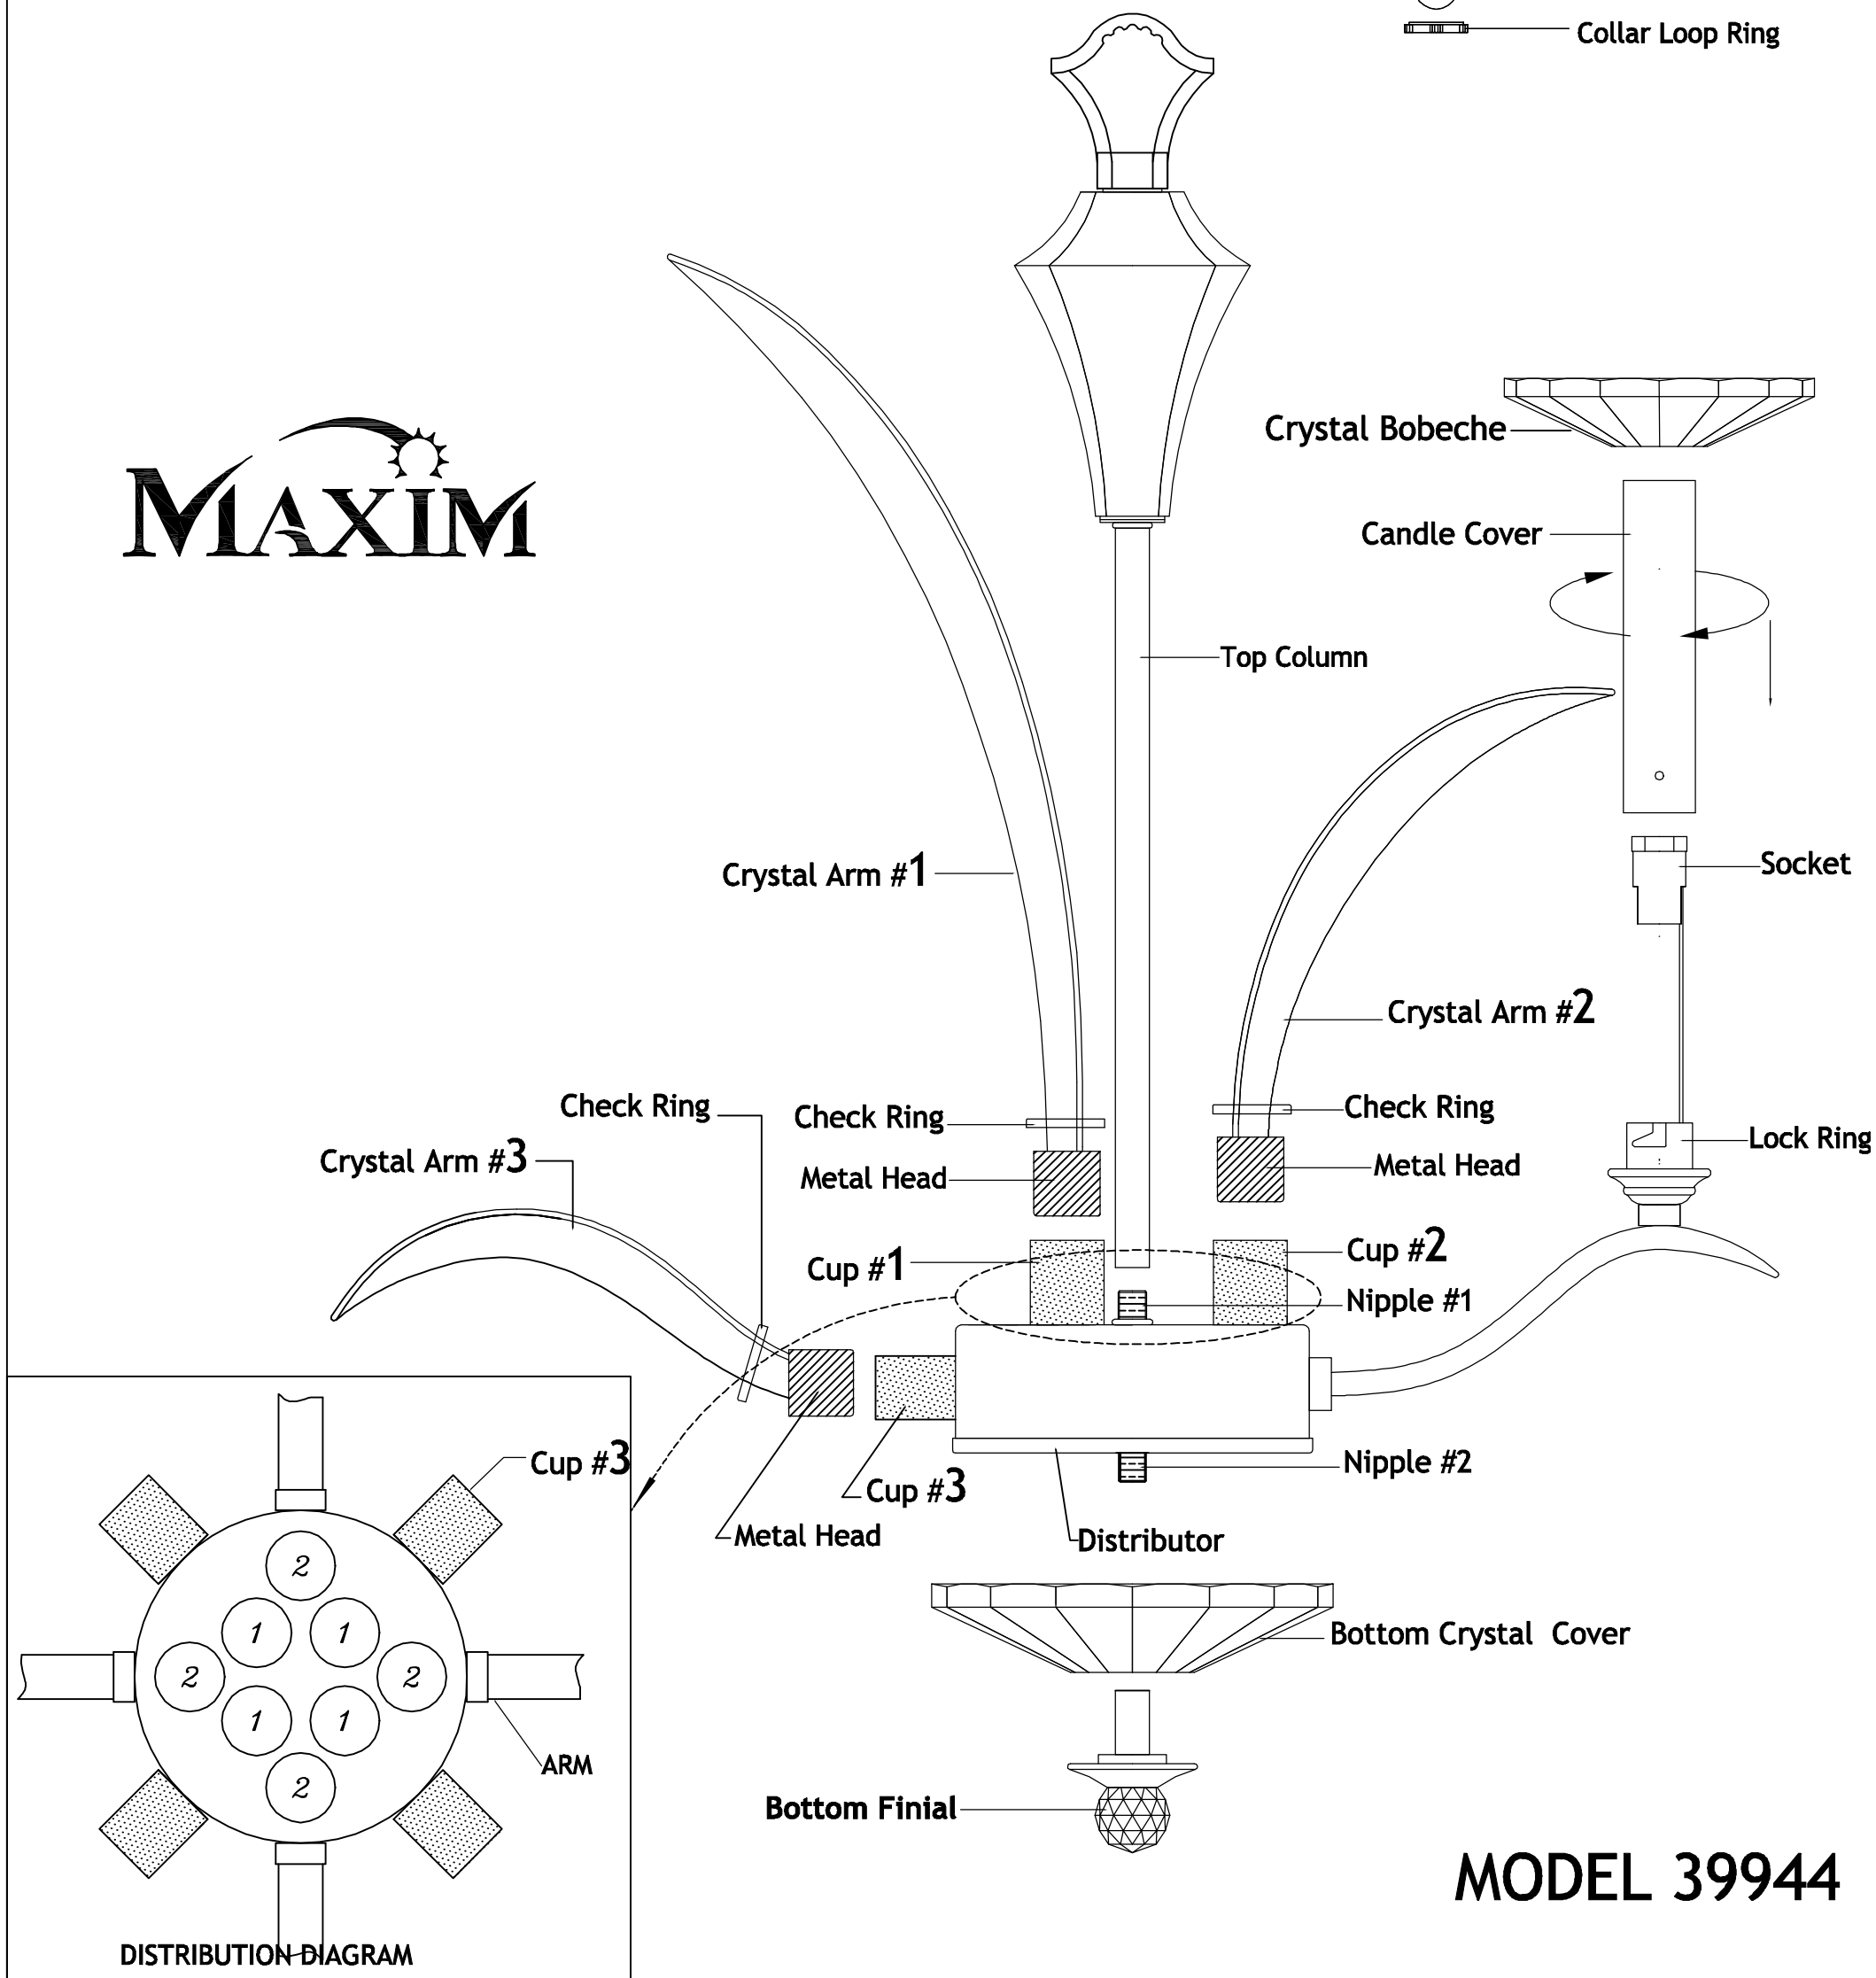


PARADISE

INSTALLATION INSTRUCTION

!! Please use the gloves enclosed before handling any parts or crystal

1. Screw the Top Column to Nipple #1. Hang the fixture. Please refer to the Installation Instruction enclosed for installation and wiring.
2. Insert Crystal arm#1 into Cup#1. Remove label prior to installing crystal. The magnet in the cup will hold the arm in place. Snap Check Ring onto cup.
3. Repeat Step 2 for Crystal #2 and #3, Please refer to the DISTRIBUTION DIAGRAM for positioning.
4. Insert the Candle Covers over the Sockets with the indented point down and twist lock onto Lock Ring. Install the Crystal Bobeches over the Candle Covers.
5. Install the Bottom Crystal Cover over Nipple #2 and secure with the Bottom Finial.

MODEL 39944

For missing parts or installation questions call 1-800-486-2946

| COMPONENT LIST | | | |
|-----------------------|----------------------|-------------|-----------------------------|
| No. | Component | Q'ty | Replacement Part No. |
| 01 | Canopy Kit | | |
| | Canopy | 1Pc | |
| | Crystal Canopy Cover | 1Pc | CRYCOV023 |
| | Collar Loop | 1Pc | |
| | Chain | 1Pc | |
| | Nipple | 1Pc | |
| | Hex nut | 2Pcs | |
| | Metal Washer | 1Pc | |
| | Washer | 1Pc | |
| | Crossbar | 1Pc | |
| | Ground Screw | 1Pc | |
| | Wire Nut | 3Pcs | |
| | Mounting Screws | 2Pcs | |
| 02 | Crystal Bobeche | 4Pcs | CRYCOV027 |
| 03 | Candle Cover | 4Pcs | |
| 04 | Crystal Arm #1 | 4Pcs | CRYARM001 |
| 05 | Crystal Arm #2 | 4Pcs | CRYARM002 |
| 06 | Crystal Arm #3 | 4Pcs | CRYARM003 |
| 07 | Bottom Crystal Cover | 1Pc | CRYCOV029 |
| 08 | Bottom Finial | 1Pc | FINCRY020 |
| 09 | Top Column | 1Pc | |
| 10 | Glove | 1pair | |